

Seat Belt and Komfort Latch® Gen2 Instructions and Usage Guide


BRINGING SAFETY TO PEOPLE™

18881 U.S. 31 North P.O. Box 408 Westfield, IN 46074-0408 U.S.A. www.imminet.com

Using the Komfort Latch Gen2

The Komfort Latch is an optional feature. If you decide to use it, the process of relieving seat belt tension is simplified.

- 1. Adjust the seat to its proper driving position.
- 2. Latch your seat belt.
- 3. If available, adjust the Seat Belt Height Adjuster to a comfortable driving position, as shown in Figure 1.

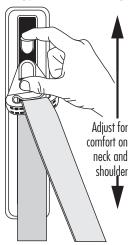

Shoulder Belt Web Guide

Pinch the height adjuster's top and bottom levers together to move the shoulder loop to a comfortable height. The shoulder belt should be centered and lying flat across the chest - between your neck and the edge of your shoulder.

Move the shoulder loop until it clicks into a locked position.

Figure 1

- While seated in a comfortable driving position, with the seat belt on and adjusted, push the "ON" button to engage the Komfort Latch (Figure 2).
- 5. After the Komfort Latch button is engaged, lean forward in the seat until you hear a "click."

This sets the slack in the seat belt to approximately one inch. When you move forward, for example to check your side mirrors, the Komfort Latch allows approximately five to seven inches of web to be released without disengaging during normal vehicle operation. In the event of a sudden deceleration, the Komfort Latch disengages automatically.

A WARNING

Using the seat belt with too much slack will reduce the effectiveness of the seat belt during a crash and could result in serious injury or death.

To Release the Komfort Latch Gen 2:

Always disengage the Komfort Latch when removing the seat belt. This allows the seat belt to fully retract.

- 1. There are two ways to disengage the Komfort Latch:
 - a. Unbuckle and tug on the upper torso portion of the seat belt.
 - b. Press the "OFF" button on the Komfort Latch (Figure 2) and unbuckle the seat belt.



