
imminet.com



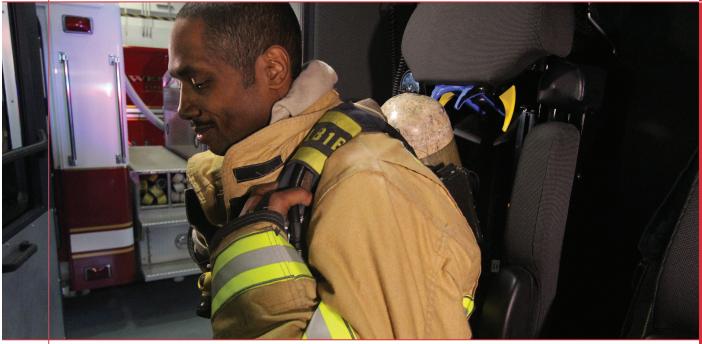


No Straps. No Lever. No Hassle.


SmartDock, by IMMI®, is the first and **only** hands-free SCBA holder for fire apparatus. Firefighters no longer have to waste precious time fumbling with a cord or lever. With SmartDock, they simply stand up, exit the apparatus, and get to the fire faster.

Offering single-motion SCBA insertion and hands-free release, SmartDock is the clear choice for fire departments across the country. In the event of a crash, the top claws clamp down for a secure hold, preventing the tank from becoming a projectile.

Engineered so one model fits nearly all SCBAs used in today's U.S. fire departments, SmartDock is low profile and easily and quickly retrofits to a wide variety of seats.

A European model is also available.








Smart Dock 🏞 TRUSTED. PROVEN. UNSURPASSED®

SmartDock#

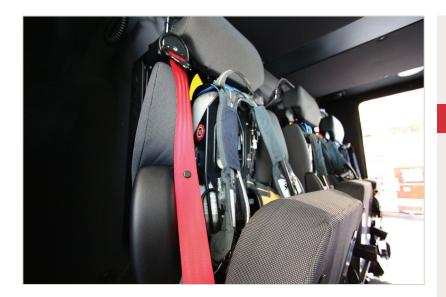

When seconds count.

When called into action, firefighters need to move quickly, and you shouldn't have to choose between sacrificing precious seconds to save others and your own safety. That's why more fire departments choose SmartDock, by IMMI, the first and only hands-free SCBA holder for fire apparatus. With no annoying straps or levers, SmartDock offers single-motion SCBA insertion and hands-free release when the firefighter stands up to exit the seat. In the event of a collision, the top claws clamp down for a secure hold, preventing the cylinder from becoming a projectile.

Availability

SmartDock is available for all major OEMs. Contact your dealer representative for more information or to buy SmartDock.

When seconds count, count on SmartDock.

How it Works:

- Simply set the SCBA into the SmartDock base and gently push it into the upper claw.
- Check to make sure the SmartDock SCBA holder is properly adjusted. The knob on top of the SmartDock allows for easy adjustment.
- 3. SmartDock holds the tank securely during transit and locks it in place in the event of a crash.
- 4. SmartDock releases the tank with no levers or straps. Once the SCBA is strapped on, simply bend at the waist and stand up to release the tank from the upper claw.









Steve Ward sward@imminet.com

18881 IMMI Way Westfield, IN 46074 317.896.9531





